

# Under Mattress Sensor Mat- Corded RJ11 & JS63



AWAY FROM BODILY  
FUNCTIONS

REDUCES INFECTION  
RISK AND FACILITATE  
INFECTION CONTROL

DOES NOT INTERFERE  
WITH PRESSURE  
RELIEF OF MATTRESS

MORE PATIENT  
COMFORT

DOES NOT REQUIRE  
TO BE REPOSITIONED  
DAILY

LESS HANDLING, LESS  
BREAKAGE

USE SOLVENT WIPES  
TO DISINFECTANT &  
CLEAN

PORTABLE

EASY TO MOVE FROM  
ROOM TO ROOM

INTEGRATES TO MOST  
NURSE CALL SYSTEMS

DURABLE & RELIABLE

LARGE SIZED  
PRESSURE MAT  
(840MM X 300MM)

**INDIGO  
CARE**

**Normally Open System - MED- B819-RJ11 (with RJ11) – requires a Monitor & Y-Lead**  
**Normally Close System - MED- B819-JS63 (with 6.35mm Jack) – requires Interfacing Lead**  
Indigo Care provides a pressure sensitive Premium Under Mattress Sensor Mat that is designed to immediately alert staff should a resident leave their bed which is most useful to residents who are at risk of falling out of their bed, or those who require assistance in arising from the bed. The mat is place underneath the mattress, directly under the buttock area.

For a normally open call system, a monitor is required. Choose between our Anti-Tamper Deluxe Alarm Monitor (MED-TS1011A) or our Deluxe Voice Alert Monitor (MED-TS0893). For a normally open call system, a monitor is connected to the Under Mattress sensor mat (MED-B819-RJ11) and to the call point with a Y-cable. For a normally close call system, the bed mat (MED-B819-JS63) is connected directly to call point with an interfacing lead. Once the resident removes themselves form the bed, the sensor mat will activate the monitor's alarm/nurse call system and alert the staff. Set-up instructions are printed on the actual mat.

Eyelets at the corner of the pad are used to strap the mat to a fixed position if required.

#### **ADVANTAGES OF UNDER MATTRESS SENSOR MAT:**

- Away of bodily functions provides more comfort to the user
- Pressure relief function of mattress is not compromised
- Reduces infection risk, improves management & handling of infection control
- No need to reposition sensor mat multiple times a day
- Less handling means less breakage

*Note: Under Mattress Sensor Mat may not work effectively with all the alternating air mattresses. Please check before purchase.*

#### **KEY SPECIFICATIONS:**

- **Dimensions: 840mm X 300mm**
- **Connection: RJ11 for normally open – Requires a Monitor (Anti-Tamper or Voice Alert) and a Y Cable**
- **Connection: Jack 6.35mm plug for normally close – Requires an Interfacing Lead**
- **Electrical resistance < 500 Ohm**
- **White PVC, Thickness 0.20mm**
- **Warranty: 12 months**

#### **PRODUCT ACCESSORIES:**

- RJ11 requires Y Cable
- Jack 6.3 requires straight 6.35mm or 3.5mm cable
- Anti-Tamper Monitor or Voice Alert Monitor (4 X AA batteries-not included)
- 6V DC Adaptor (optional for Anti-Tamper Monitor only)

#### **ORDER INFORMATION**

Email your purchase orders to  
[sales@indigocare.com.au](mailto:sales@indigocare.com.au)

#### **INDIGO CARE**

(Horizon Electronics Company, T/as)  
2/93 Rushdale Street, Knoxfield, VIC, 3180  
PH +61 3 9763-2988  
[www.indigocare.com.au](http://www.indigocare.com.au)  
ABN 36007302801